


MOP CART INSTALLATION INSTRUCTION

A guide for assembling the Cleanroom Mop Cart with Buckets, Ergonomic Flat Mop Wringer, and Ergonomic Flat Mop.

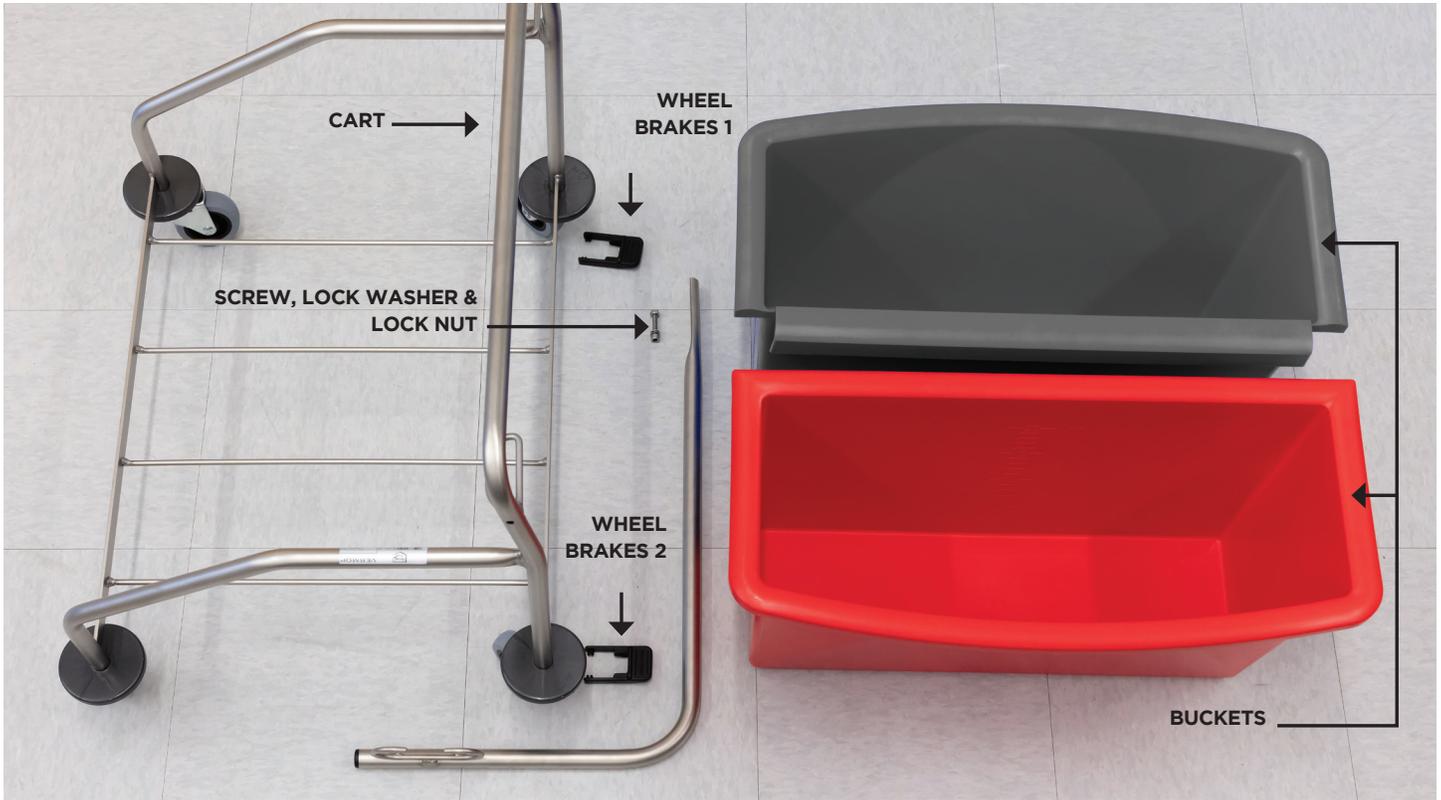

STEP 1.

Open package and make sure all parts are included: cart, buckets (x2), handle, wheel brakes (x2), screw, lock washer, lock nut.



STEP 2.

Install wheel brakes: depress the wheel brake from the back of the wheel until the brake is engaged. in rectangular holes. Press down on the brake to lock wheels; lift to unlock.




STEP 3.

Install handle: align the handle with screw holes on the side of the cart; ensure the mop handle points to the cart front; insert screw and washer; then tighten the nut.



STEP 4.

Install buckets: the edge of the grey bucket goes on top of the red bucket.

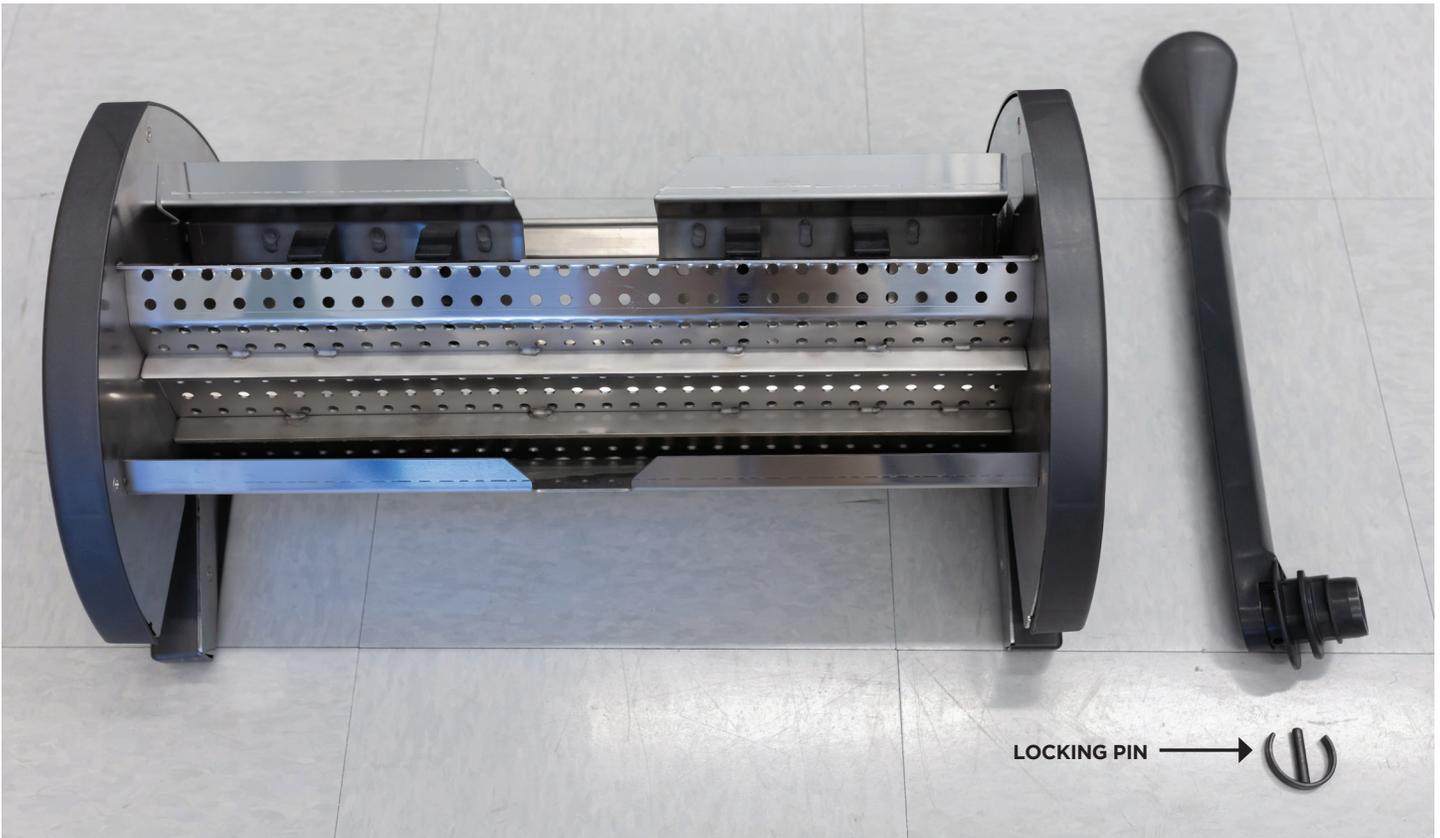

STEP 5.

Wringer assembly: Open the package and find all included parts—wringer, handle, and locking pin.



STEP 6.

Insert the handle: ensure holes on the handle align with holes on the metal bar in the wringer; push the handle completely into the insert.



STEP 7.

Insert the lock pin until it is completely flush with the edge of the handle.



STEP 8.

Place the wringer on top of the cart.



STEP 9.

Flat mop assembly: align screw holes on mop head and handle; insert screw and tighten the lock nut.



STEP 10.

Install holder clips: insert the holder clip at the position parallel to the mop head; rotate the clip until it is perpendicular to the mop head.



STEP 11.

Install mop cover: press hand switch to fold mop head; slide on mop cover and flatten mop head.

COMPLETED ASSEMBLY

